



PARTS

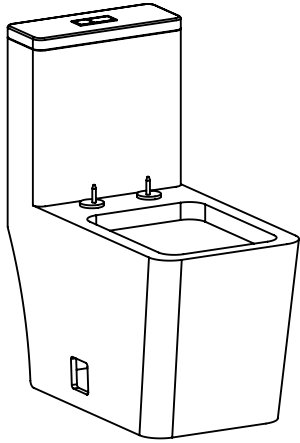


A x 1

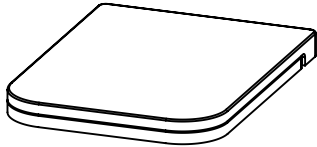


B x 1




C x 2




D x 1

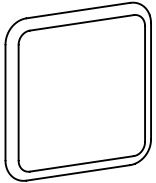

E x 2

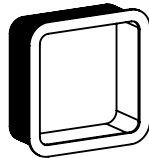

F x 2

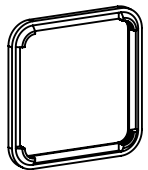

G x 2



H x 2




I x 2



J x 2

For 12" rough-in installation only

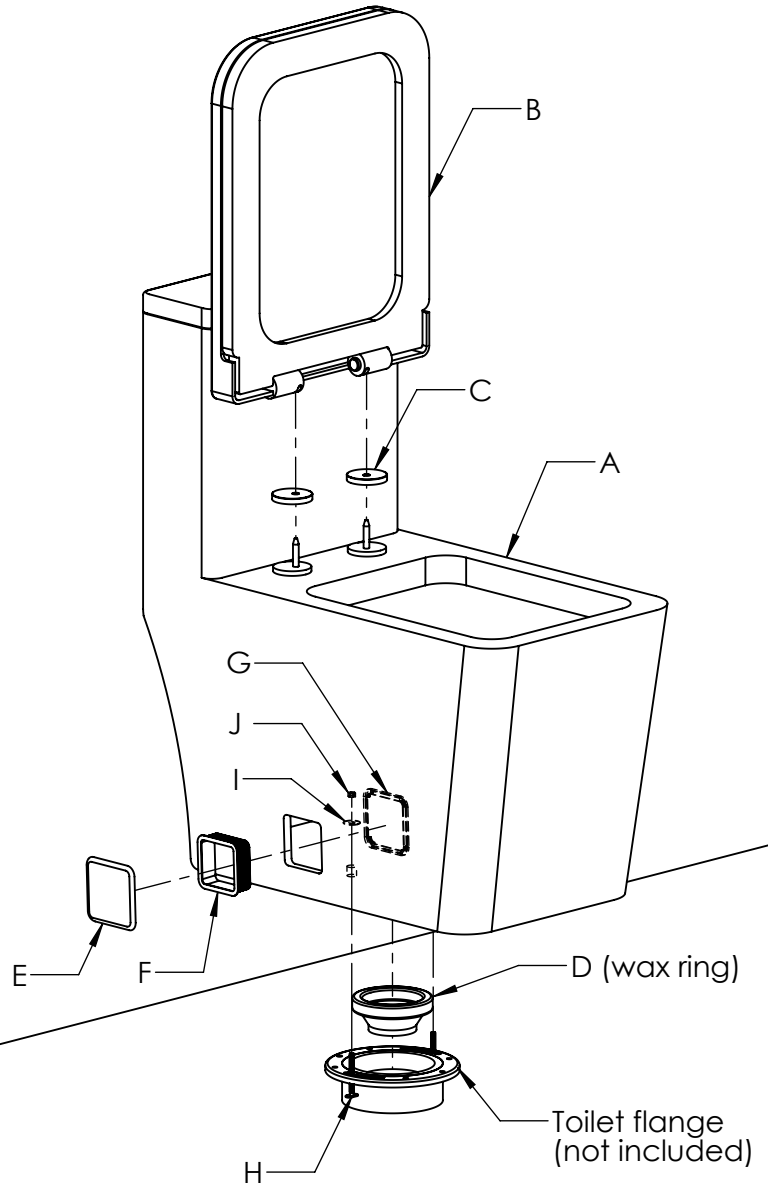

Install supply hose according to manufacturer's installation instructions (not included).
Fitting: 7/8" BC